

Message	Possible causes	Action
PWR FAUL UAIT	This message appears on recovering the power after having been cut-off. If the power cut occurs during the spin cycle, the message "WAIT" is displayed. For safety reasons, wait approximately 1.5 minutes without pressing anything until "PWR FAULT" is displayed.	Press START: the programme continues to operate in the same phase as before the power cut. Press EXPRESS: the programme ends.
E2	FAULT LOCK This message appears when it is detected that the door can not be unlocked at the end of the programme or that it has unlocked during the programme	Press ESC: the programme ends.
E3	FAULT DRAIN PIPE This message is displayed when, in spite of deactivating the emptying valve output, the water level inside the drum has not decreased for a pre-established period of time.	Press START: the programme continues. Press EXPRESS: the programme ends.
E4	FAULT WATER INLET This message appears when, in spite of activating the corresponding solenoid valves' outputs, the water level inside the tub has not increased during a certain pre-established period of time.	Press START: the programme continues. Press EXPRESS: the programme ends.
E5	HEATING FAULT This message is shown when, in spite of activating the heating output, the water temperature has not increased for a certain pre-established period of time.	Press START: the programme continues. Press EXPRESS: the programme ends.
E6	MAX. TEMP This message is displayed when the water temperature has exceeded 95 °C.	Press START: the programme continues. Press EXPRESS: the programme ends.
E7	THERMOSTAT OPEN This message appears when the water exceeds 95 °C	Press START: the programme continues. Press EXPRESS: the programme ends.
E9	MOTOR HEATING This message appears when the thermal protection of the washing machine's motor is detected to have not been activated.	Press START: the programme continues. Press EXPRESS: the programme ends.
E10	UNBALANCE This message appears when the final spin activates the unbalance micro three times.	Press EXPRESS: the programme ends.
E11	CLOTHES HOT This message is displayed when a programme execution finishes but the water temperature inside the tub exceeds 50 °C.	Press EXPRESS: the programme ends.
E12	WATER IN TUB This message is displayed when a programme execution is finished but there is still water inside the tub. The door can not be opened until the water is drained from the tub.	Press EXPRESS: the programme ends.